HYDRO▸RAIN®

Built for Speed™

HRC 410 WIFI
INDOOR Smart
Irrigation Controller
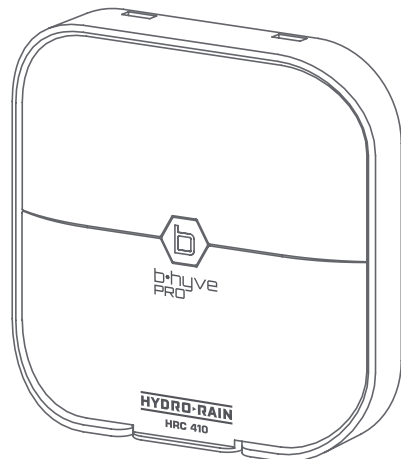
QUICK START GUIDE

Compatible with other B-hyve™ products

Contents in the Box

- Wi-Fi Indoor Sprinkler Controller
- Screwdriver
- Mounting Screws and Anchors
- Transformer
- Quick Start Guide
- Conduit Cover

FCC and IC Statement

This device complies with Part 15 of the FCC Rules and Industry Canada license exempt RSS standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and the receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help
This device meets the FCC and IC requirements for RF exposure in public or controlled environments. The end user is advised to maintain a distance of 20 cm from the controller and any personnel to ensure compliance with RF exposure regulations.
This Class B digital apparatus complies with Canadian ICES-003.

Déclaration de FCC et l'IC

Cet appareil est conforme à la section 15 de la Règlementation de la FCC et la norme RSS d'Industry Canada.
Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas causer d'interférences nuisibles, et (2) cet appareil doit tolérer toutes les interférences, dont les interférences pouvant causer un fonctionnement non désiré. Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.
Remarque: cet appareil été testé et déclaré conforme aux limites d'exposition pour les appareils numériques de classe B, selon la section 15 de la Règlementation de la FCC. Ces limites sont conçus pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radio fréquence et, si elle n'est pas installée et utilisée conformément aux instructions, peut causer des interférences nuisibles aux communications radio. Cependant, il n'est pas garantie que des interférences ne se produisent pas dans une installation particulière. Si cet appareil cause des interférences gênantes à la réception d'un signal radio ou de télévision, ce qui peut être déterminé en allumant et en éteignant l'appareil, l'utilisateur peut corriger les interférences en suivants une des mesures suivantes :
• Réorientez ou repositionnez l'antenne de réception.
• Augmentez la distance entre l'appareil et le récepteur.
• Branchez l'appareil dans une prise sur un circuit différent du circuit sur lequel le récepteur est branché.
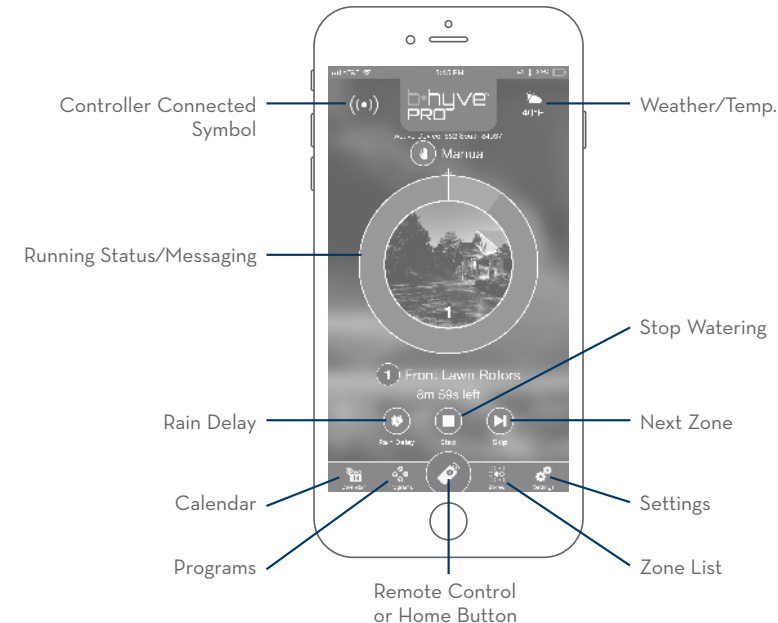• Consulter le revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.
Cet appareil est conforme aux exigences de la FCC et de l'IC concernant l'exposition aux ondes dans un environnement public ou contrôlé. Il est conseillé à l'utilisateur final de maintenir une distance de 20 cm du contrôleur pour assurer la conformité aux réglementations d'exposition RF. Information de conformité pour le Canada

The B-hyve™ Pro app

- **Install the B-hyve™ Pro app on your smart device**
  You will need a smart device to manage the controller. Property owners should download the free B-hyve™ app from the iOS App Store or Google Play.

- **Note:** The app will guide you through initial set up of your sprinkler controller. In addition, there are help icons throughout the app with more information and useful tips.

Controller Connected Symbol

Running Status/Messaging

Rain Delay

Calendar

Programs

Remote Control or Home Button

Weather/Temp.

Stop Watering

Next Zone

Settings

Zone List

Specifications

Transformer ratings:
Input:
Australia—240V AC 50/60Hz 23W
Europe—230V AC 50/60Hz 23W
USA—120V AC 60Hz 23W
Output:
24V 750 mA

Controller ratings:
Input/Output:
AUS & EU—26V AC 750 mA 50/60 Cycle
USA—24V AC 750 mA 60Hz

Controller Temperature Operating Range:
Operating: 32-158° F (0-70° C)
Storage & transport: -4-176° F (-20-80° C)

Controller Humidity Operating Range:
Operating: 0–80%
Storage & transport: 0–90%

Altitude:
6,500' (2,000 meters)

Installation Class II
Over Voltage Category II
This controller works with any standard 24V irrigation solenoid.
The internal fuse is non-replaceable.

Help

If the app and the website don't have what you're looking for, please call our technical support line.

1-800-493-7672 or 1-801-299-5550
www.hydrorain.com | bhyve.hydrorain.com

Acts as a hub for other B-hyve™ products

04060-50 rA
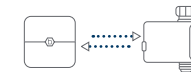
Controller Installation

- **Select a location**
  Choose an indoor location near power and away from direct sunlight, if possible. This location should also have a good Wi-Fi signal. You can check this using a smart phone. (Find a location that has a minimum of two bars)

- **Note:** If replacing a controller, it is helpful to take a photo of the wires before you remove them from the old controller.

- **Mount the controller**
  Install a screw (included) into the wall. Use the expanding anchors (included) for plaster, masonry or drywall installations. Hang the controller on the installed screw using the keyhole slot. Level the controller and use the second screw in one of the preformed mounting holes to secure the controller.
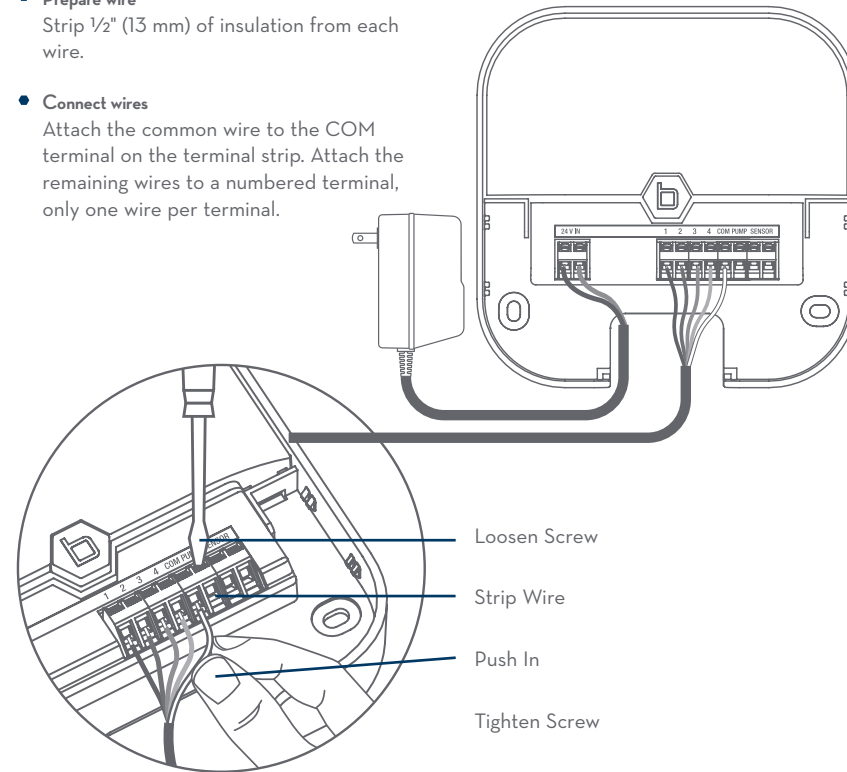
Minimum Signal

Keyhole

⅛" (3 mm)

No. 8 Screw

Wall

Pre-formed
Mounting Holes
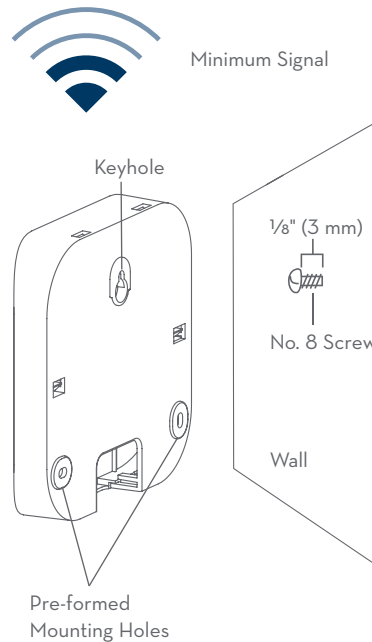
Connect Valve Wires

- **Prepare wire**
  Strip ½" (13 mm) of insulation from each wire.

- **Connect wires**
  Attach the common wire to the COM terminal on the terminal strip. Attach the remaining wires to a numbered terminal, only one wire per terminal.

Loosen Screw

Strip Wire

Push In

Tighten Screw

Controller Installation–Connecting to Wi-Fi

- **Plug in your Hydro-Rain HRC 410 controller**
  Once your HRC 410 controller is plugged into the power source, it will automatically look to pair with your smart device. The ⓑ will begin to blink blue. This indicates that your controller is ready to pair with your smart device. Ensure that your smart device has Bluetooth® turned on.

- **Connect to your Hydro-Rain HRC 410 controller**
  Open your B-hyve™ Pro app, create an account or login, and follow the step-by-step process to connect and set up your device.

  Note: If connecting to a Wi-Fi network, select your network from the list and enter the password for the network to connect your controller to your Wi-Fi signal. If you do not see your network name in the list, tap the refresh button in the app. If your network name still does not appear, tap "Advanced" in the app and enter your network name and password. This device will only connect through 2.4 GHz Wi-Fi networks. 5.0 GHz networks are not supported and will not appear in your app.
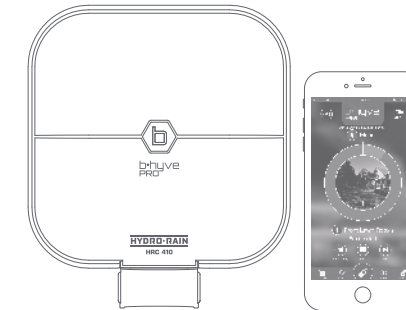
FOR OPTIMUM CONTROLLER PERFORMANCE, CONNECT TO WIFI TO RECEIVE THE LATEST CONTROLLER UPDATES.

## Programming and Operation

- **Programming the controller**
  The app has help screens and video to assist you with Wi-Fi connections, programming, smart watering and other general questions you may have.

- **Note:** Your programmed schedules are stored both in the app and on the controller. Watering will continue, if Wi-Fi connection is lost.

- **Manual Operation**
  All programming and full functionality of the controller are available in the app. If you have the need, there are some basic operations you can perform directly at your controller.
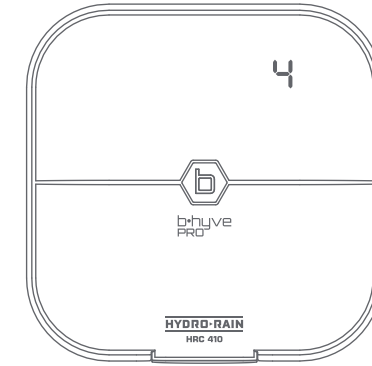
Function	Button Press
MANUAL WATERING	Hold ⓑ until A (water ALL stations) appears, then release. Quickly press ⓑ again until desired station appears. Default watering is 10 min. per station.
CANCEL STATION	Press ⓑ once to cancel current station.
RAIN DELAY	Set in Pro app; ⓑ blinks yellow and d appears.
ON/OFF	Hold ⓑ for 10 sec. until ⓑ turns white.
HARD RESET	Quickly press ⓑ 5 times.